
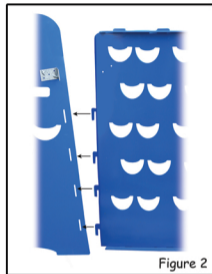



Welly Wagon Assembly Instructions

Parts

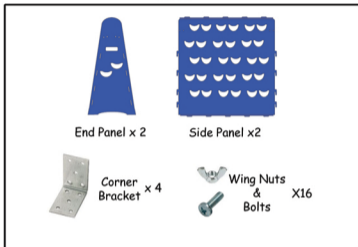

1) Bolt the Brackets onto both End Panels and fully tighten as shown (fig1).

2) Insert the 4 lugs of a side panel into the slots on the end panel and allow the side panel to drop down to align the holes of the brackets with the holes of the side panels (fig 2). Insert the screws through the holes. Once both screws are through put the wing nuts on and tighten.

3) Repeat step two until both side panels are attached to both end panels.

About this product

These welly stands are made in a small workshop in Letchworth. They are machine cut from High Density Polyethylene (HDPE) sheets. Although the sheets are only 5mm thick they are extremely tough, hard wearing and resilient and are completely weatherproof. Because of the size of the sheets they may bend slightly in transit, however, once the Stands are assembled they create a rigid and very strong structure.

HDPE is totally recyclable.

